








User Manual

Programming & SCN-Coding of Emission Related Control Units with “Pass-Thru Programming System – SAEJ2534”

Version 0.7.

Table of Content

1. General Introduction on Pass Thru SAEj2534 Compliant application	
1.1 Using Application Windows	3
1.2 Star Utilities: Functions Overview	4
1.2.1 Star Pad: Operation and Interface	5
1.2.1.1 Star Pad Tool bar detailed description	6
1.2.1.1.1 Create a new document	6
1.2.1.1.2 Open a document	6
1.2.1.1.3 Save a document	7
1.2.1.1.4 Delete a document	7
1.2.1.1.5 Print a document	7
1.2.1.1.6 Page preview	8
1.2.1.1.7 Page orientation	8
1.2.1.1.8 Copy/Cut/Insert	9
1.2.1.1.9 Undoing and Redoing	9
1.2.1.1.10 Zoom in/out	9
1.2.1.2 Star Pad formatting bar detailed description	10
1.2.1.2.1 Functions of the formatting bar	10
1.2.1.2.2 Using tabs	11
1.2.1.2.3 Orientation help	12
1.2.1.2.4 Navigating within a document	13
1.2.1.2.5 Formatting functions	13
1.2.2 Version Information	14
1.2.3 License Manager	14
1.2.4 Self Diagnosis	15
1.3 Introduction on the Pass Thru application	16
1.3.1 Start the Application	16
1.3.2 Pass Thru Buttons	17
1.3.3 Pass Thru Help	17
2. Example of control unit programming with SDflash Release-CD: Control Unit ME 2.8	
2.1 Establish connection	19
2.2 Specify the device	19
2.3 Specify the automobile	20
2.4 Selection of the control unit	21
2.5 Initial startup	23
2.6 SCN Code	28

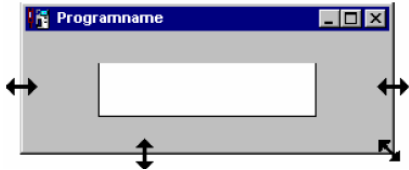1.1 Using Application Windows		
What do you want to do?	How to do it.	Where to do it.
Open application window	<double click> on the application icon (e.g. Pass Thru) on the desktop.	
Close application window	<double click> on the application icon button in the title bar (the icon depends on the application)	
Move application window	Position the pointer on the blue title bar and drag it with the left mouse button.	
Window Change size – Maximize	<Click> on the <Maximize> button	
Window Change size – Restore	<Click> on the <Restore> button	
Window Change size – Minimize	<Click> on the <Minimize> button	
Window Change size – Customize	Position the pointer to a window frame or window corner. When the two-sided arrow appears, drag with the left mouse button.	

1.2 Star Utilities: Functions Overview

Utilities are service applications which assist you in your work.

To access Star Utilities Utilities, select *Programs/PassThru/StarUtilities* in the <Start> menu.



⇒ The Star Utilities applications are started via the menu item *Programs*.
 ⇒ The application symbol is displayed and hidden via *Options*.
 ⇒ *Window* allows you to arrange several active applications on the screen.
 The applications can also be started using the buttons below the menu bar.



The following applications are available:

⇒ **Star Pad** - A user-friendly word processor, well suited for the workshop environment. See Chapter 1.2.1.



⇒ **Version Information** -- This contains current version and release status information for Pass Thru. This page should be printed for possible future use as an extra support aid. See Chapter 1.2.2.



⇒ **Licensemanager** – Used to enter the current Pass Thru license keys. This can be displayed in five-digit fields. This window also contains the LAN ID (network identification). See Chapter 1.2.3.



⇒ **Self Diagnosis** – A diagnostic function which supplies information which is important for the Call Center. See Chapter 1.2.4.



⇒ **Select Printer** – If you have more than one printer at your disposal, you are offered a selection of appropriate printer drivers (control programs). See Chapter 1.2.5.



⇒ **Closing Star Utilities** – To close the service applications select the menu item *Close* or <click> on the STAR Utilities logo in the title bar to select the *Close* option.




1.2.1 Star Pad: Operation and Interface

Star Pad opens in a full-screen view to make it easier and more comfortable to work in the application.

Various buttons are available for working in Star Pad:

1. Open new document.
2. Open a previously saved document.
3. Save a newly created document.
4. Delete a previously saved document.
5. Print a document.
6. View document in page layout.
7. Arrange page in portrait or landscape orientation.
8. Cut text and paste elsewhere.
9. Copy text or graphics onto the clipboard. See Chapter 1.2.1.1.8
10. Paste text or graphics from the clipboard into your document.
11. Protocol view and processing Pass Thru.
12. Last action in the test is undone.
13. The undone action is redone.
- 14.+15. Zoom in/out.

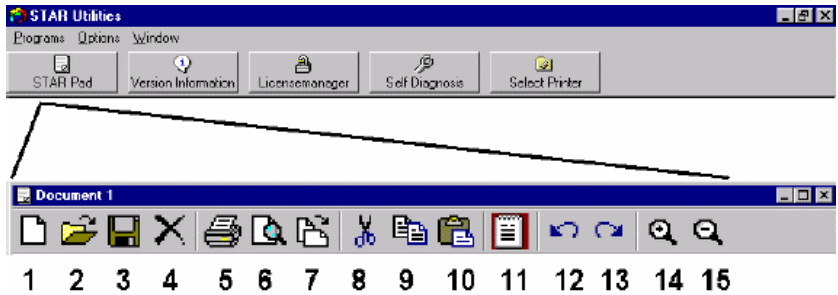

The toolbar contains some data processing options, for example



- Create file (new)
- Open file
- Save file
- Delete file

A complete list of processing options can be found under File and Edit.

Menu item View

The menu item View includes a Zoom option and the option of removing all bars from the screen display. If a bar is visible on the screen, this is indicated by a tick beside the name of the bar.


Note: In our example the format bar and the ruler are activated. The 100% zoom setting is also activated.

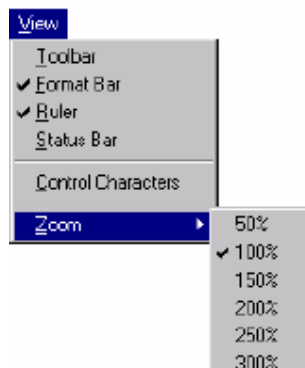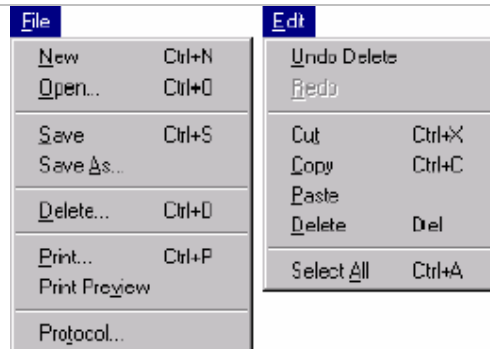

1.2.1.1 Star Pad: Tool bar detailed description


1.2.1.1.1 Create a new document

After Star Pad has been started, an empty document will appear. If this is saved and closed, a new document can be created using button (1). The standard name Document 2 is given in the title bar until the user has given the file a name. Until Star Utilities is closed, each new document is given a number in succession. When Star Utilities Utilities/ Star Pad is started again, Document 1 is automatically given as the default file name.

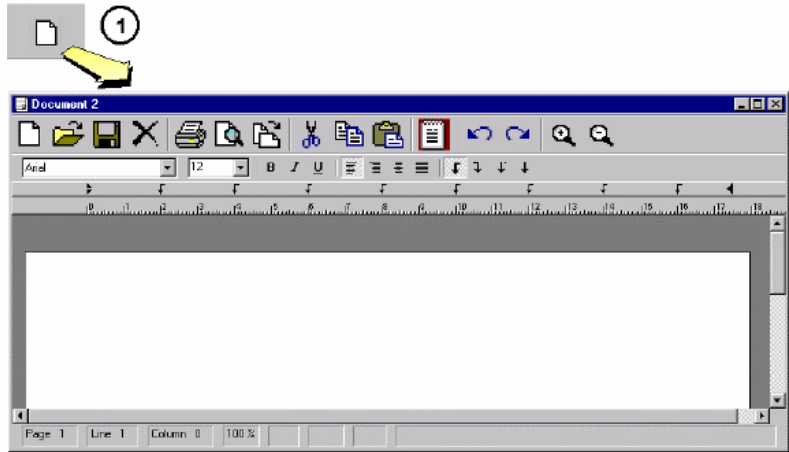


1.2.1.1.2 Open a document

In the selection shown opposite, <click> with the TrackPoint on the file to be worked on. This is then highlighted in blue and is opened by <clicking> on the <Open> button.

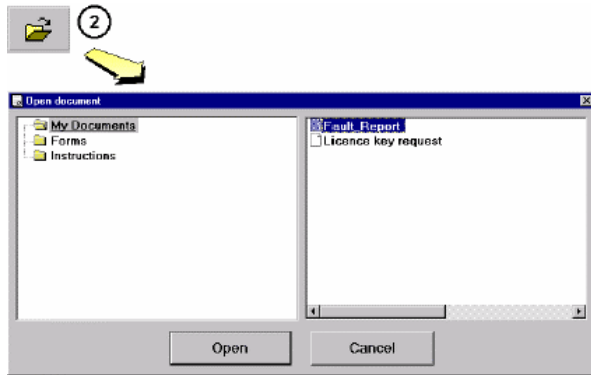


1.2.1.1.3 Save a document

The finished document should be named and saved to the hard disk for later editing.
 A default file name appears in the open window. This is overwritten with the actual file name. The name may contain spaces, but periods are not allowed.
 Note: Use a name which has some relation to the actual document. This will make it easier to find the document at a later date.
 Note: If changes have been made to the document or a new document has been created, a message will appear on the screen to this affect when Star Pad is being closed down.
 <Clicking>on <OK> will close the current document without saving any changes. By default, the <Cancel> button is pre-selected to ensure that the document is not accidentally closed without having been saved.

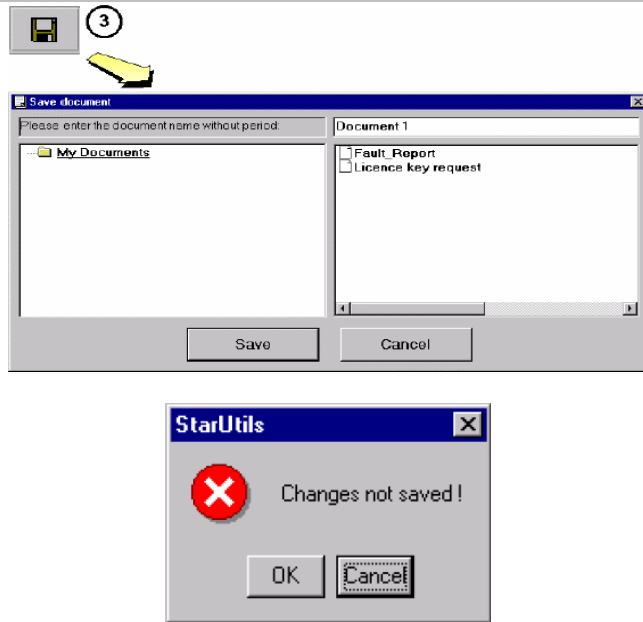


1.2.1.1.4 Delete a document

To delete a document, select the document required. The document selected will appear marked in blue.
 <Click> on the <Delete> button to start the deletion process. A message will appear asking for confirmation of final deletion. Simply <click> on <Yes>.
 After this point, the deletion process can no longer be interrupted. The file is finally deleted.

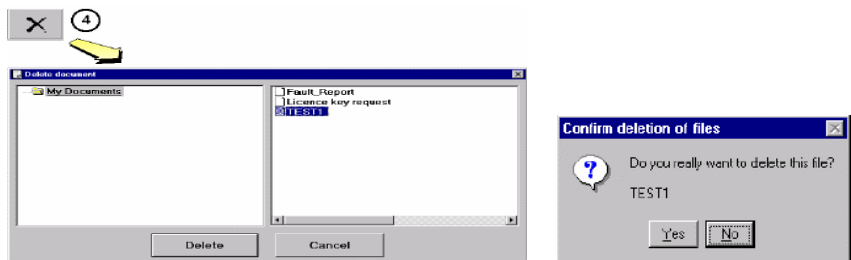

1.2.1.1.5 Print a document

The settings in the "Print" dialog box are preset and do not have to be adjusted. Select <OK> to print the document. To print multiple copies, overwrite the number 1 (5.1) with the number of copies required or use the scroll bar arrow (5.2) beside the number.
 Note: Example: Pages 2-4 of a 5-page document are to be printed. Enter the number 2 in the box after the word from (5.3) and the number 4 after the word to (5.4).
 <Click> on <OK> to start printing.

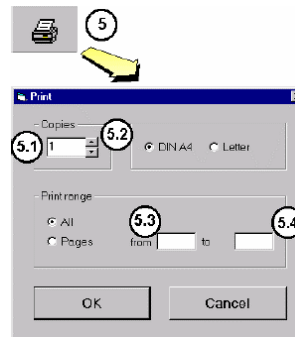


1.2.1.1.6 Page preview



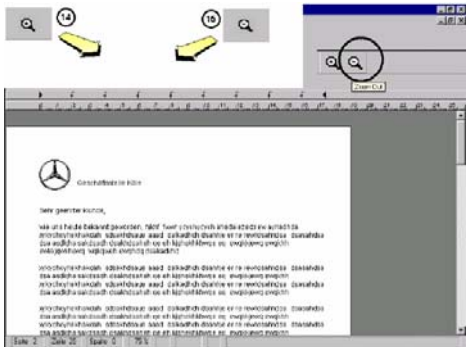
The print preview option provides an overview of the appearance and the individual pages of a document. These pages are displayed with a grey background. Text cannot be read in this mode. The current page numbers are displayed in the upper left corner. Use the scroll bars located at the bottom right-hand corner to move to the next or previous page. If you wish to print the document, <click> on the print button.



1.2.1.1.7 Page orientation

By default, documents and forms are displayed on the screen and printed in portrait orientation. The landscape orientation can be selected via the option <Page setup> setup>. To change the orientation, < click> on the required selection and confirm by <clicking> on <OK>.

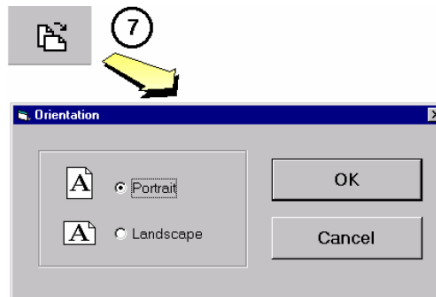


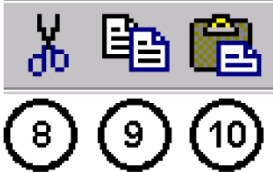1.2.1.1.8	Copy / Cut / Insert	
	<p>Cut Mark the required text and <click> on the scissors symbol. The marked text is "cut out".</p>	
	<p>Copy Mark the required text and <click> on the symbol with the "two pages". The marked text can then be copied elsewhere.</p>	
	<p>Insert After "cutting out" or "copying", the text is inserted into the current position of the cursor by <clicking> the third symbol.</p>	
1.2.1.1.9	Undoing and Redoing	
	<p>Text actions such as deleting characters, changing the font type and size, settings tabs and formatting characters can be undone by <clicking> on the undo button (12). If this does not produce the desired result, the action can be redone by <clicking> on the redo button (13).</p>	
1.2.1.1.10	Zoom in / out	
	<p>The text display on the screen can be magnified. <Clicking> on the magnifier button with the plus sign enlarges the view. This process can be repeated by <clicking> again. To return to a smaller view <click> on the magnifier icon with the minus sign. The change in size is only in the screen display and does not affect the font size in print.</p>	

1.2.1.2 Star Pad: Formatting bar detailed description

1.2.1.2.1 Functions of the formatting bar

 The formatting bar is located beneath the tool bar buttons. Star Pad offers a selection of different fonts. The current font type is displayed in a window.

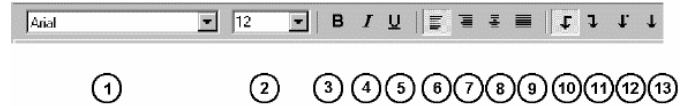

1. To select another font, use the TrackPoint button to <click> once on the arrow to the right of the window. A list will appear. A scroll bar is located to the right of this list. The available fonts are displayed by scrolling down the list by <clicking> on the arrow. <Click> on the upper arrow to return to previous font.
 2. The font size is also displayed in a drop-down list.



 
Other functions in the formatting bar:

- 3. Align text to the left.
- 4. Center text.
- 5. Align text to the right.
- 6. Justify text.
- 7. Bold selected text.
- 8. Italicize text (at a slight angle).
- 9. Underline selected text.



Star Pad has four types of tab settings:

- 10. Left tab - text is aligned to the left.
- 11. Right tab - text is aligned to the right.
- 12. Decimal tab - fractional digit is placed to the right of the decimal point.
- 13. Centered tab - text is centered in the tab.

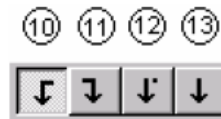

1.2.1.2.2 Using Tabs

 
Selecting tab:

Tabs are selected by *<clicking>* on the tab you require. The selection remains active until the next change is made. When Star Pad is started, the default setting (left tab) is displayed.



Inserting tabs:

- After selecting a tab, it is inserted by *<clicking>* on the gray tab area (1) in the position at which the tab is to be inserted.
- To remove tabs position the TrackPoint pointer on the tab to be removed, hold down the left TrackPoint button and drag it down into the workspace. This removes the tab.

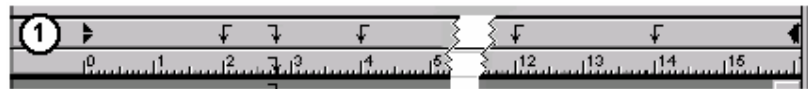


BL_II_K3114_022_UK

1.2.1.2.3 Orientation help

A ruler with dividing lines facilitates better orientation.

Star Pad offers additional help in the form of symbols which are located directly above the ruler:

 - The left margin is indicated by a bisected arrow pointing to the right.
- The right margin is indicated by a solid arrow pointing to the left.
- Star Pad has a default page width of approximately 17.5 cm.

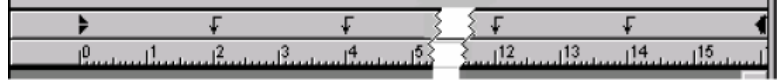

Changing margins:

-The left margin can be moved further to the right by holding down the TrackPoint button. Ensure that you drag the bottom corner of the arrow using the TrackPoint.

- If the TrackPoint button is positioned on the upper corner, only this corner will be moved. This causes the margin of the text line in which you are currently positioned to move, whilst the other lines remain unchanged.
- Use the arrow at the end of the line to change the right hand margin.




1.2.1.2.4 Navigating within a text document

The right scroll bar (1) is used for orientation in a document containing several pages. Drag the rectangle (2) in the scroll bar to change page.

Use the bottom scroll bar (1) to move the page to the far left margin. This can be done either using the TrackPoint to <click> on the arrows (3) or by dragging the scroll bar (2).

Another "position indicator" is offered in the status bar at the bottom of the Star Pad window. Page numbers, line numbers and column numbers are displayed here.

Note: Each character constitutes a column.

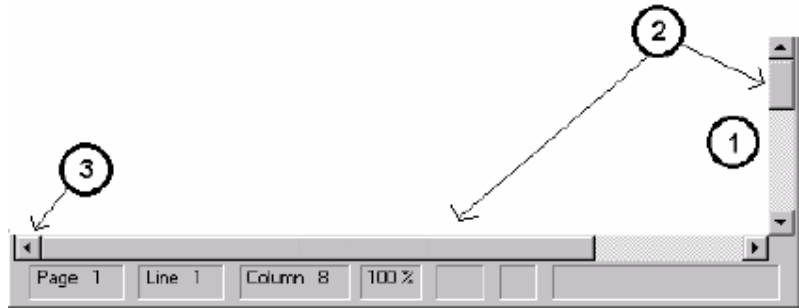

1.2.1.2.5 Formatting functions


As in the formatting bar, the menu *Format/ Font* allows you to change the font type and size.

Other options are also available, for example font attributes such as strikethrough and various types of underlining.

To superscript and subscript numbers <click> on the desired selection.

The *Page* option allows you to choose between portrait and landscape format.

The description with appropriate image can be found in the previous section on *Page Orientation*.

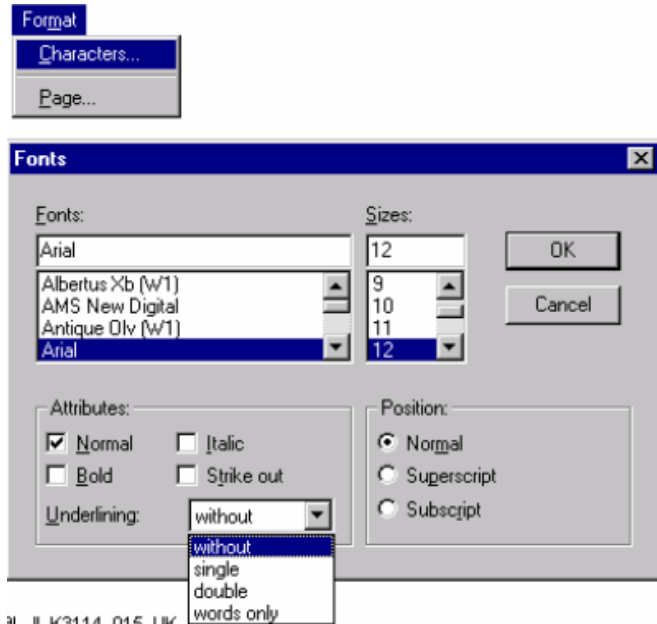


1.2.2 Version Information

Version Information in Star Utilities

This contains current version and release status information for Pass Thru. This page should be printed for possible future use as an extra support aid. To print directly, <click> on the <Print> button. No further questions will be asked by the system.

Thus, the printer must be ready for operation before you < click> on the print button

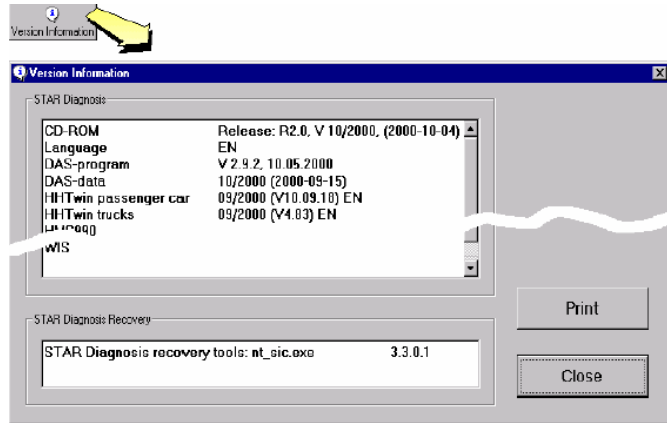


1.2.3 License Manager

License Manager in Star Utilities

Used for entering the current license keys for Pass Thru. Select DAS (means Pass Thru) using the dropdown arrows (1).

This can be displayed in "four-digit" fields. This can be activated or deactivated by <clicking> on the button indicated on the diagram (2).

This window also contains the LAN ID display (network identification)

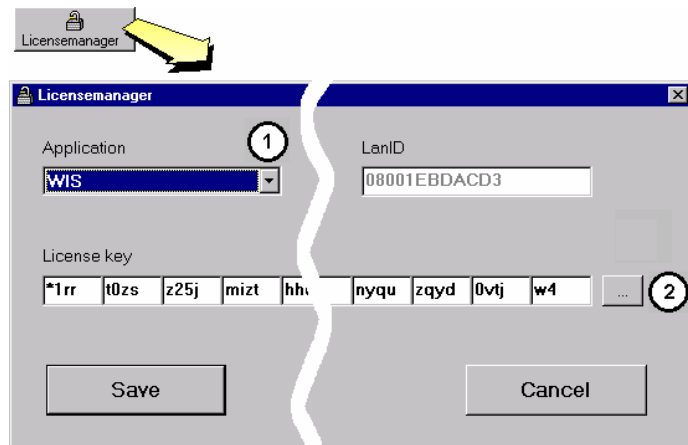


1.2.4 Self Diagnosis

Self Diagnosis ins Star Utilities

Before contacting the Call Center, the faulty module should be checked. To do so, select the button < *Self Diagnosis*> under Star Utilities.

All currently active analyses can be carried out via these buttons.

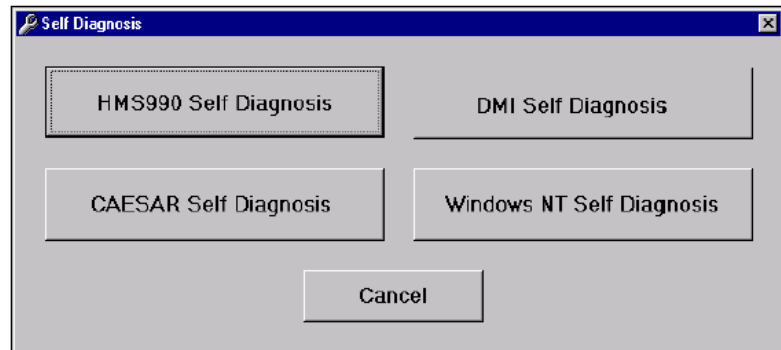

1.3 Introduction into the Pass Thru Application

1.3.1 Start the Application


Information on General Graphics

To start the application, <click> on the *Pass Thru* symbol on the desktop.

Alternative: Start/Programs/Pass-Thru



The Pass Thru application is opened in a new window.
 Display of current Pass Thru release and version information.
 Pass Thru is operated using the keyboard or via the Pass Thru buttons using the mouse.

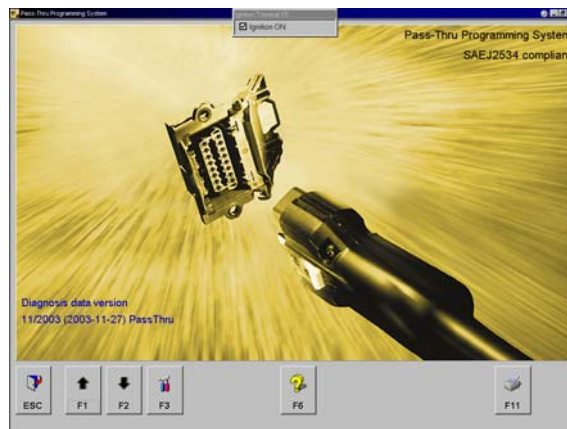


1.3.2 Pass Thru Buttons

- (1) Return to previous menu, return to main menu, exit Pass Thru
- (2) Back to previous step in the diagnostic procedure
- (3) Forward to next step in the diagnostic procedure
- (4) Switch between available system units (SI=EU / US=USA)
- (5) Confirm selection
- (6) Responding to a question with "YES"
- (7) Responding to a question with "NO" or confirm and select a marked segment
- (8) "START" monitoring between diagnosis and vehicle or control
- (9) "STOP" communication
- (10) Help menu
- (14) Delete fault codes
- (15) Repeat a decision
- (18) Print function
- (19) Open another application




1.2.3 Pass Thru – Help


Pass Thru contains a help system for quick help that is always available via the <F6> key.
 The function <F6> depends on the vehicle being diagnosed and the process position in Pass Thru.

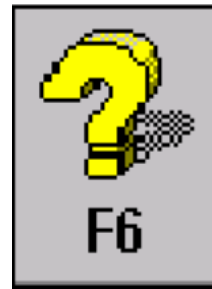


General support in Pass Thru Operating instructions

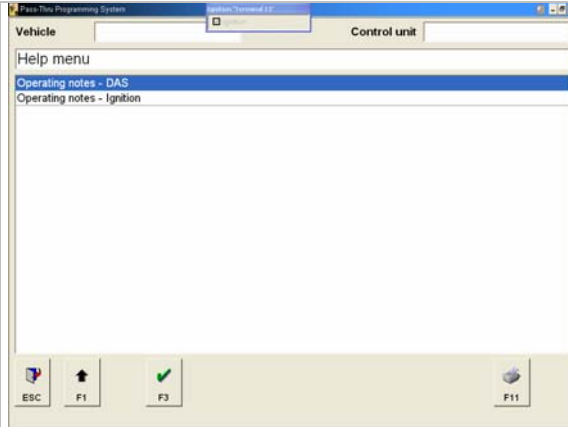

All function keys
The function keys required to operate Pass Thru are described. Key assignments can change during the diagnostic procedure!

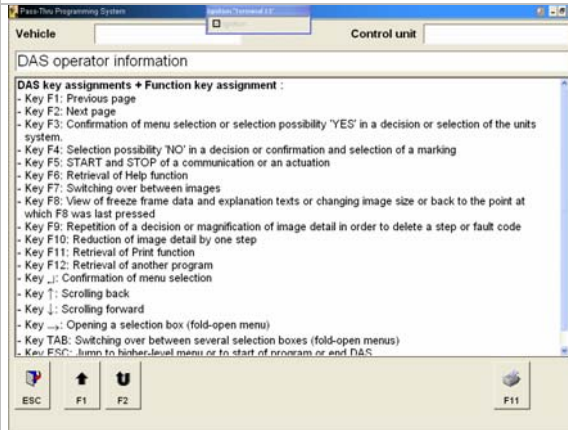

Modification and new features

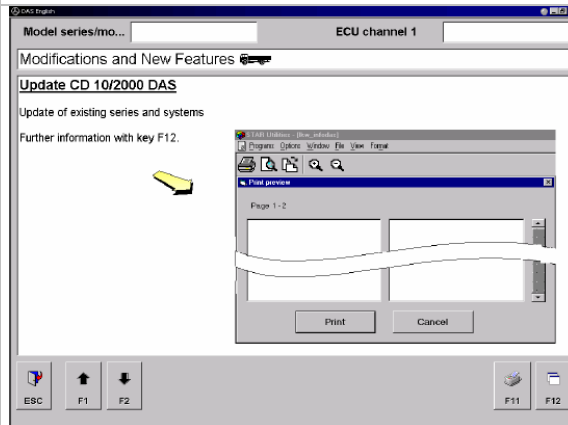


2. Example of control unit programming with SDflash release-CD. Control unit ME2.8.

2.1 Establish Connection

Connect the PC via SAE J2435 Device with vehicle and start "Pass-Thru". Please use a battery charger for backup. Click on F2 to continue.




Continue with "F2".

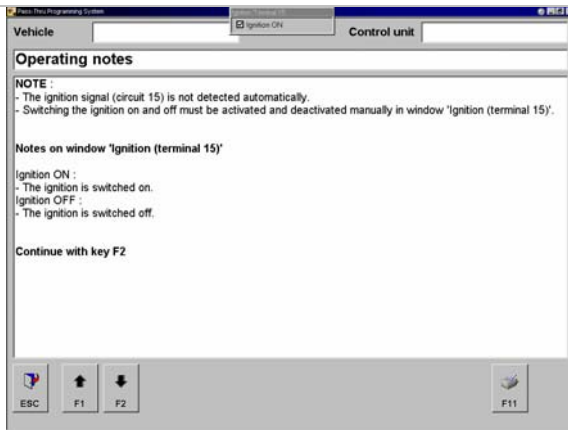


2.2 Specify the Device

Continue with F3

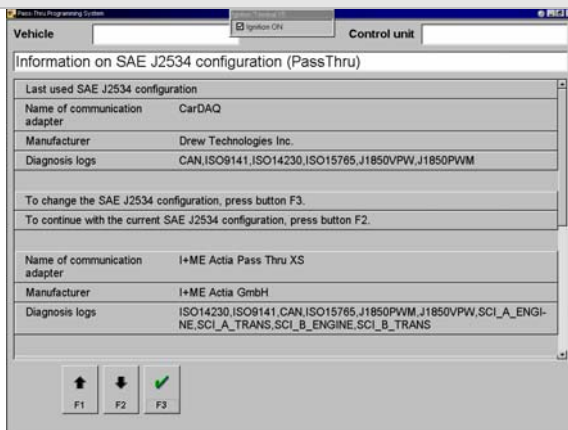


Please select your device and press F3

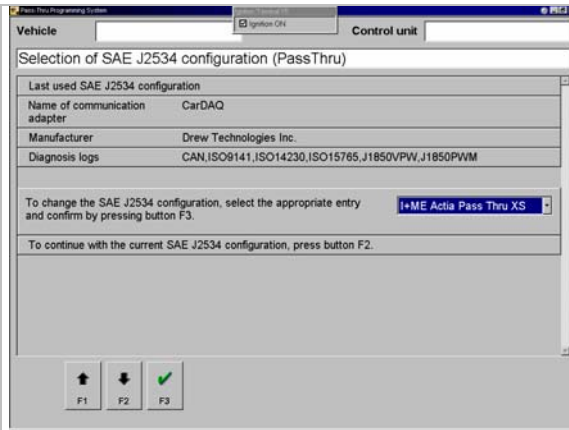


2.3 Specify the vehicle


Select the vehicle and press F3

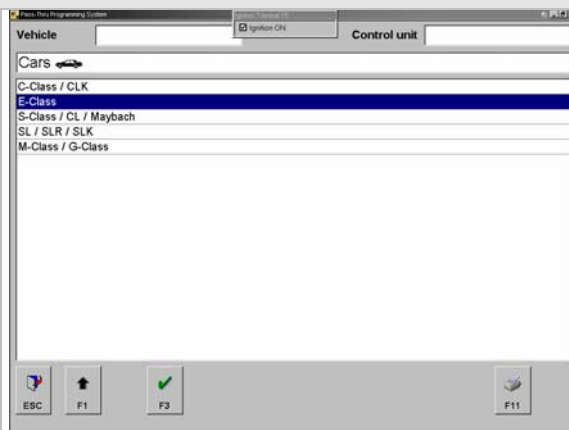


Please wait a moment.

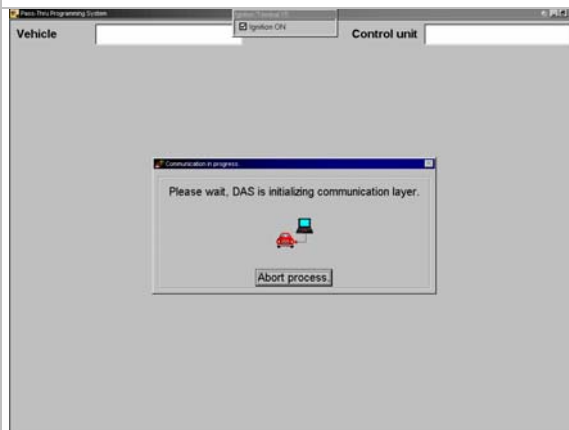

Please select the type and the steering side and press F3

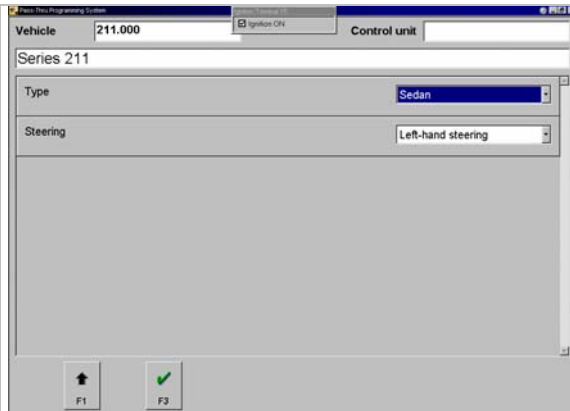


Please select motor type and press F3 to continue

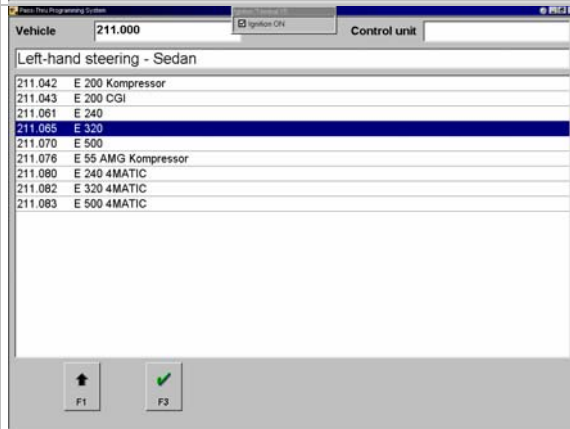


2.4 Selection of the control unit


Please select the control Unit and go on with F3

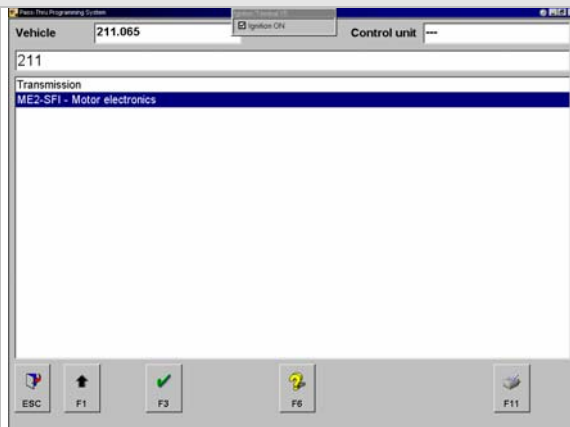

Please wait a moment while the communication layer is being established.

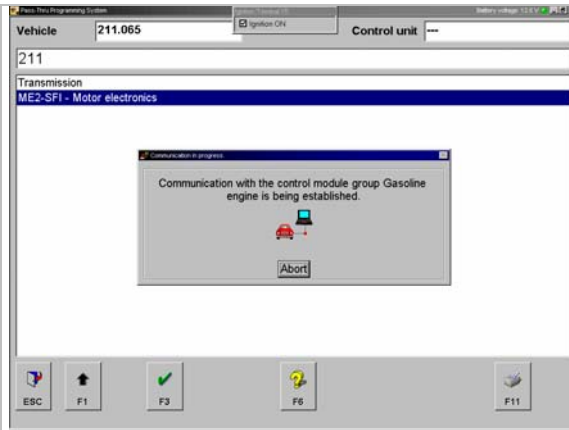


Please read the safety notes and press F3 to continue

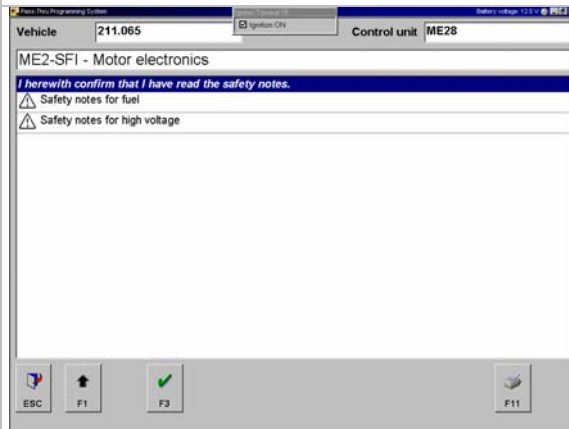

Please wait a moment.



This screen should appear.

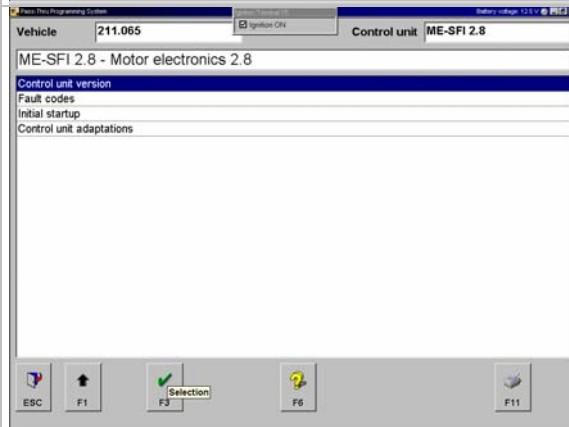


2.5 Initial startup


Please select the Menu Option initial startup and continue with F3



Start the Process with F2

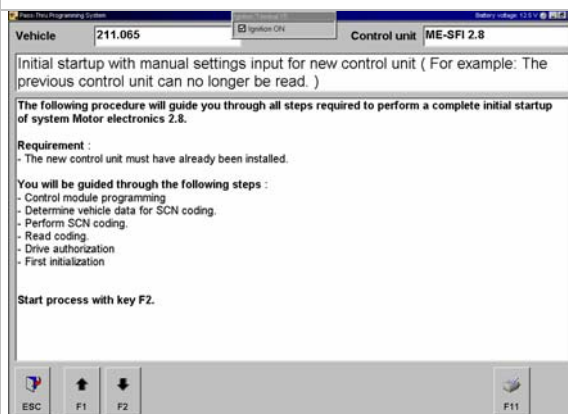

Click on Yes (F3) to perform the control unit programming

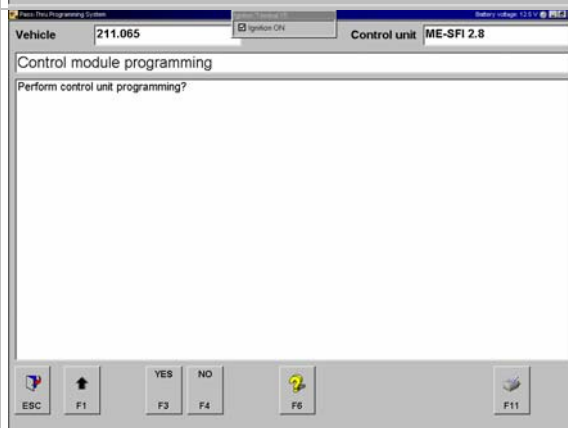


Click on F2




Insert the SDflash Release-CD into the CD Drive of the computer and press F2



Click on F2 to continue

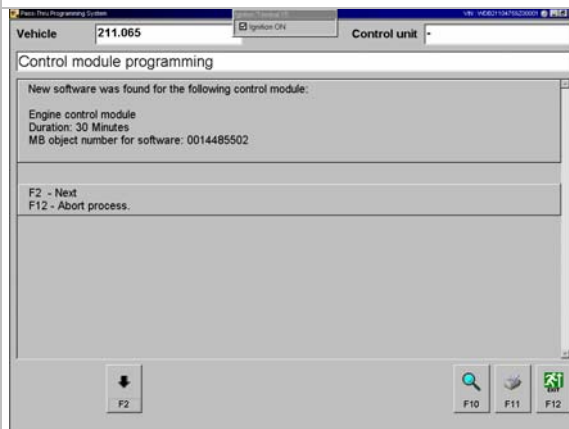


Please wait while the control unit is being programmed

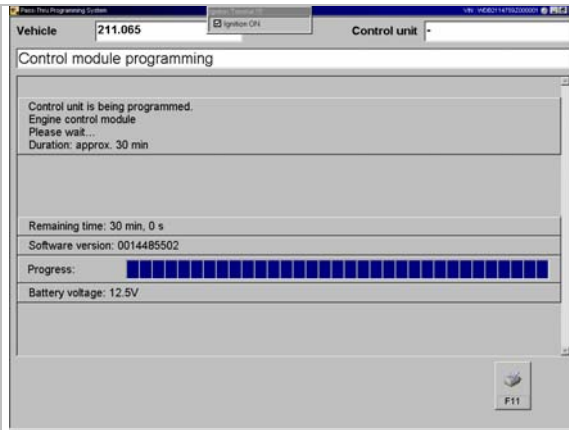





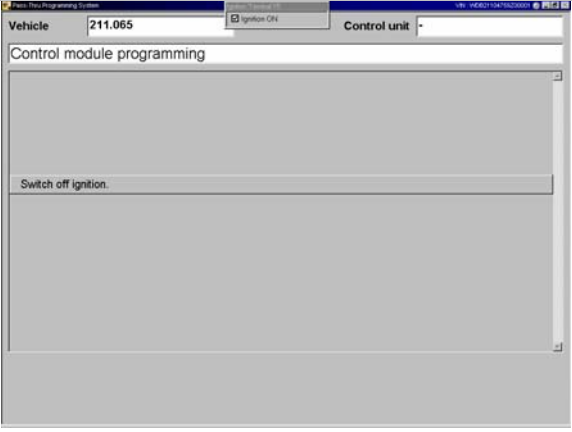

Please switch OFF the Ignition of the car and then switch OFF the ignition box

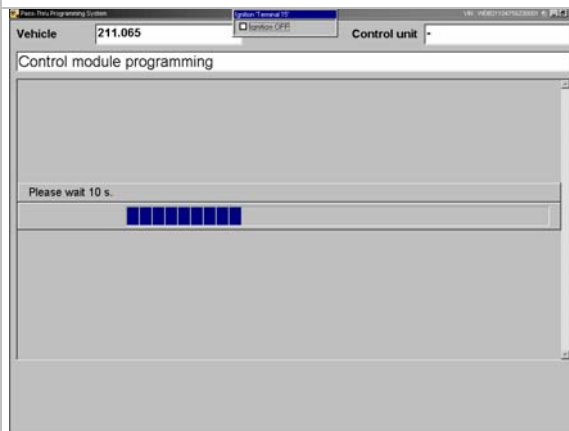

Please wait

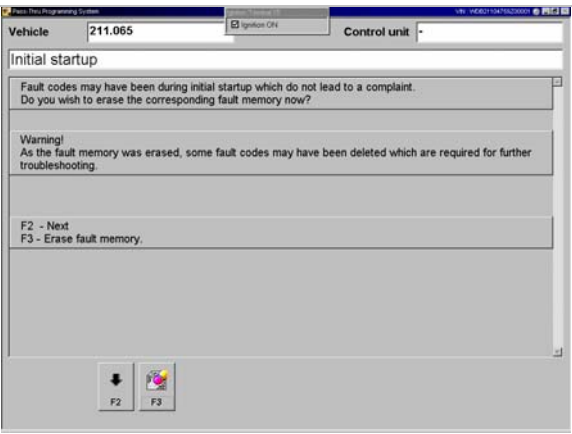

<p>Please switch ON the Ignition of the car and then switch ON the Ignition Box</p>	
<p>Please wait</p>	
<p>If the download process has been successful, there is a selection of 2 options available. Pushing “F2” finally completes the download, not erasing any stored faults (see “Illustration –13-“). “F3” erases all current faults stored in any ECU hooked up to the CAN-C bus. Only select “F3” in case you are absolute positive that you don’t need those faults information any more.</p>	

<p>If you press F3 the following screen will appear.</p>	 <p>The screenshot shows the 'Pass Thru Programming System' window. At the top, it displays 'Vehicle: 211.065' and 'Control unit:'. Below this, the main area is titled 'Control module programming'. A message box says 'Please wait... Stored faults are being erased.' Below that, it lists 'Engine control module'.</p>
<p>Please first switch OFF the ignition of the car and then switch OFF the ignition Box</p>	 <p>The screenshot shows the 'Pass Thru Programming System' window. At the top, it displays 'Vehicle: 211.065' and 'Control unit:'. Below this, the main area is titled 'Control module programming'. A message box says 'Switch off ignition.'</p>
<p>Please wait a moment</p>	
<p>Please switch ON the Ignition of the car and then switch ON the Ignition Box</p>	 <p>The screenshot shows the 'Pass Thru Programming System' window. At the top, it displays 'Vehicle: 211.065' and 'Control unit:'. Below this, the main area is titled 'Control module programming'. A message box says 'Switch on ignition.'</p>

2.6 SCN code

The control unit programming has been successful. Now the control unit needs to be coded.
If necessary insert the VIN and click on F2

Enter the SCN Code and continue the procedure of SCN coding depending of the chosen process: Office, Offline, or Online (see separate documentation that is enclosed with the J2534 Pass-Thru software for information and procedures required to obtain SCN Codes)